Casque Stéréo Bluetooth

www.OBLANC.com

NC3-3 Bluetooth Stereo Headphones User Manual

Headphone Configuration

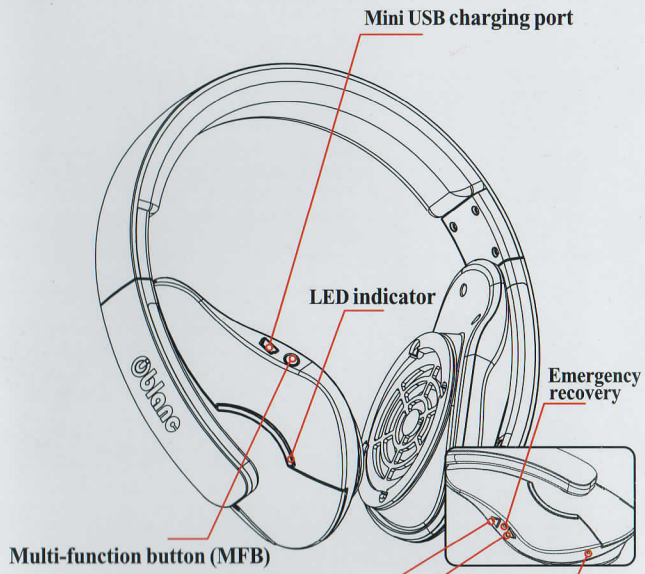

LED function index

Red and Blue flash in the process turn on the headphone	Red LED on charging
Blue on for 1.5 second and off for 0.5 second turn on Pairing mode	Red LED off full charged
Red and Blue flash in Pair with a device	Red flashes quickly low on battery
Blue on 0.5 second, off 2.5 second Paired with a device	Red on 2 seconds and turn off headphone off
Red on 1 second, off 3 second disconnected with the paired device	

Functions Briefing

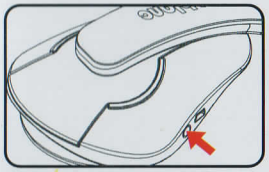

When the headphone is off, push and hold the MFB for 5 or more seconds until the LED flashes Blue and Red, ignore the power-on beep. Navigate to your mobile or Bluetooth device and choose the Oblanc Bluetooth device. The device may ask for a PIN number. Enter "0000" for PIN. A beep will indicate a connection has been established. The Blue LED will light up and flash slowly afterwards.

Step 1 Pairing / Sync

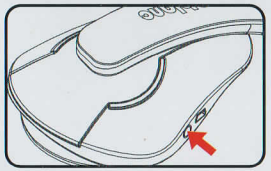

Push and hold the MFB for 3 seconds to turn the headphone on. A beep sound will be made and LED will flash Blue(On) . Push and hold for 5 or more seconds to turn the headphone off (The Red LED will light up so release button when you hear a beep sound to shut down).

Step 2 Powering on/off

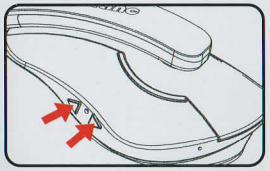

Push +Vol and Vol- buttons for volume control. Push and hold the volume + or - button for 2 seconds for the next/previous song. Press the MFB button to pause/play the song. NOTE: You cannot Fast Forward or Rewind a song with these headphones.

Step 3 Volume and Song control

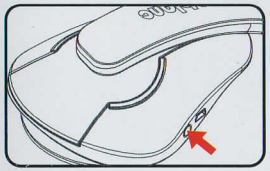

When listening to music, push the MFB button to answer incoming calls. Push the button again to end the call. Push MFB twice to redial previous number. Push and hold for 3 seconds will activate voice dialing.

Step 4 Answering calls

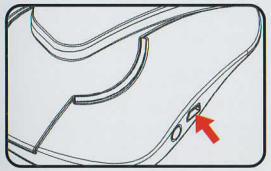

To charge the headphone, connect the device to a USB port with the mini USB cable provided. The Red LED will remain lit when charging. (About 2 hours for a full charge.) When the device is fully charged, there will be no LED lit up on the device.

Step 5 Charging

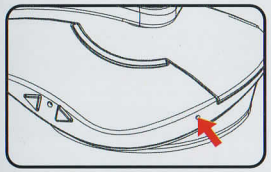

Emergency recovery switch. Use a thin pointed object to insert into the hole. This will shutdown the headphone, and return the headphone to the manufacturer's default mode.

Step 6 ERS

Thank you for purchasing Oblanc!

Enjoy the Musical Life